



Project: _____

Location: _____


Qty: _____

Notes: _____


Retrofit Kit with E26 Adapter and Butterfly Clips for model LED-S8W

INSTALLATION INSTRUCTIONS


1. Secure the butterfly clips to the luminaire with the two screws provided.

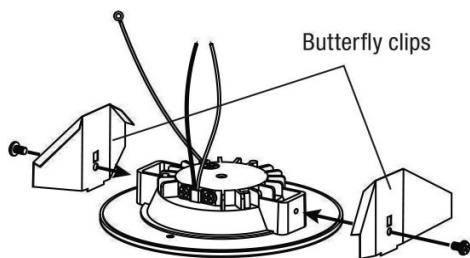


2. Secure the medium based adapter into socket in recessed housing.

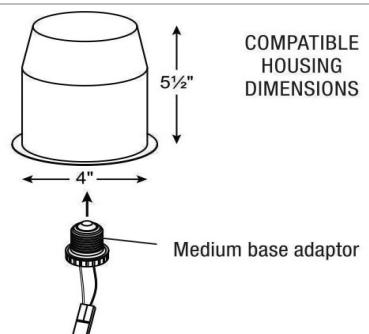


3. Insert the wires from the luminaire to the quick connector. Connect the live (black) wire to the marked slot of the quick connector.

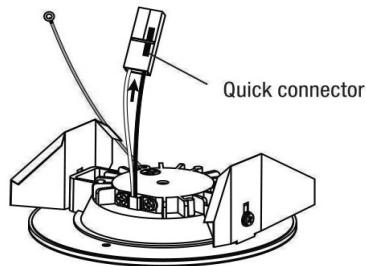

4. Connect the ground wire (yellow-green) by securing the terminal ring to the recessed housing using the provided self tapping screw. Use 1/8" drill bit to drill hole on the recessed housing. Plug in the male and female parts of the connector. Squeeze the bufferfy clips and install the luminaire in recessed housing

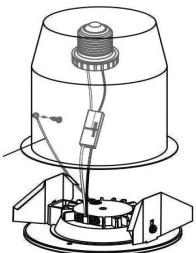

5. Center the luminaire in recessed housing. Install the trim ring by placing the metal size towards the luminaire. The magnets on the luminaire will secure the trim ring in place.

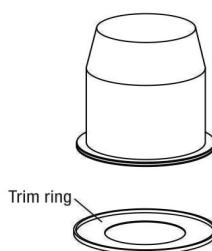

ORDERING GUIDE

cat # **RK-4M**

COMPATIBLE FIXTURES

- LED-S8W-3K
- LED-S8W-4K